




Clarity Pneumatic Paddle Instructions

PRE-SET

1. All height adjustment paddles are tested with the columns and set to the proper tension prior to delivery.

PADDLE FEATURES

1. Release Tab:
 - To adjust the table up and down the release tab must be pulled in the direction of the (3) **green arrows** (unlocked) and pressed inward.
 - When the paddle is not use make sure the release tab is up and moves in the direction opposite the (3) **green arrows**. *This will ensure the work surface doesn't move expectantly if the paddle is bumped.*
2. Screw Attachment Holes:
 - Place screws into holes and secure the paddle firmly to the underside of the work surface.
3. Paddle Adjustment Wheels:
 - The adjustment wheels are used to adjust the sensitivity of the paddles ability to interact with the gas cylinder.
 - Both of the knurled wheels must be turned in the same direction when adjusting the paddle's sensitivity.
 - Spinning the wheels left to right (clockwise) as illustrated on the photo, increases the responsiveness of the paddle. *If turned too far the paddle will not release the cylinder at all, the work surface will remain stationary.*
 - Likewise, spinning the wheels right to left (counter clockwise) as illustrated on the photo, decreases the responsiveness of the paddle. *If turned too far the paddle will release the cylinder, the work surface will move on its own.*

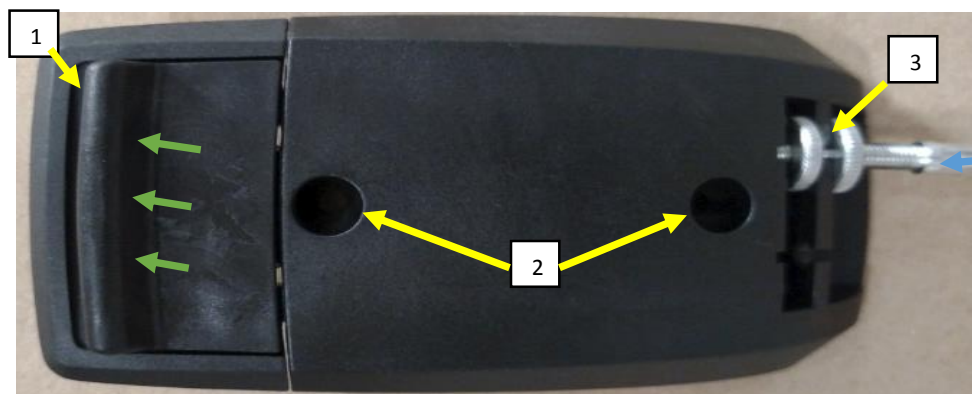

Instructions for step #3 are to occur while viewing the paddle in the position shown to the left.

Paddle is shown in the unlocked position.